


CMA Range Quick Start Guide

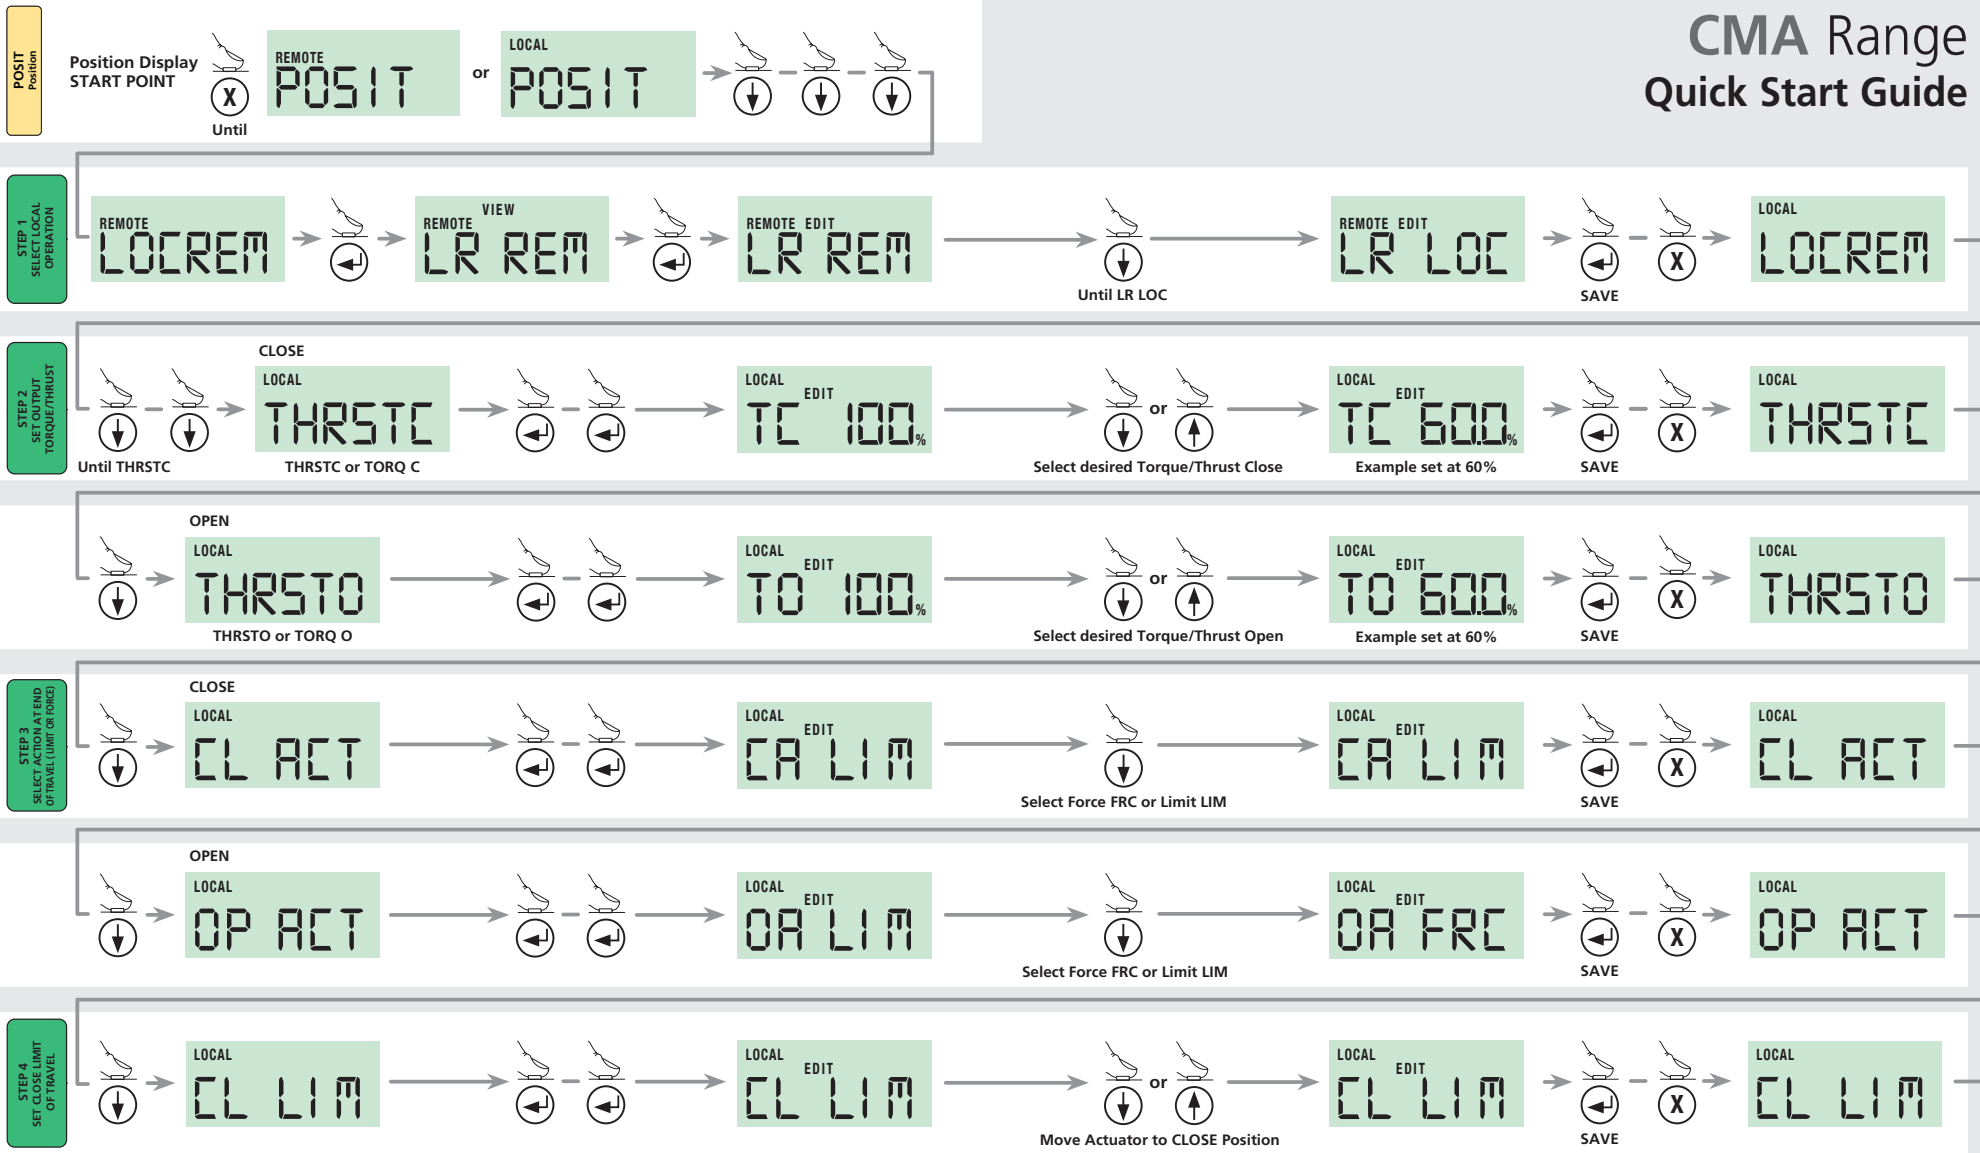

These instructions enable the actuator to be configured to suit the valve and must be carried out before electrical start up. For complete instructions see PUB094-009 CMA Installation Manual.



www.rotork.com


Rotork plc
 Brassmill Lane, Bath, UK
 tel +44 (0)1225 733200
 fax +44 (0)1225 333467
 email mail@rotork.com

USA
 Rotork Controls
 tel +1 (414) 461 9200
 fax +1 (414) 461 1024
 email info@rotork.com

A full listing of our worldwide sales and service network is available on our website.

As part of a process of on-going product development, Rotork reserves the right to amend and change specifications without prior notice. Published data may be subject to change. For the very latest version release, visit our website at www.rotork.com
 The name Rotork is a registered trademark. Rotork recognises all registered trademarks. Published and produced in the UK by Rotork. POWTG0918

CMA Range Quick Start Guide

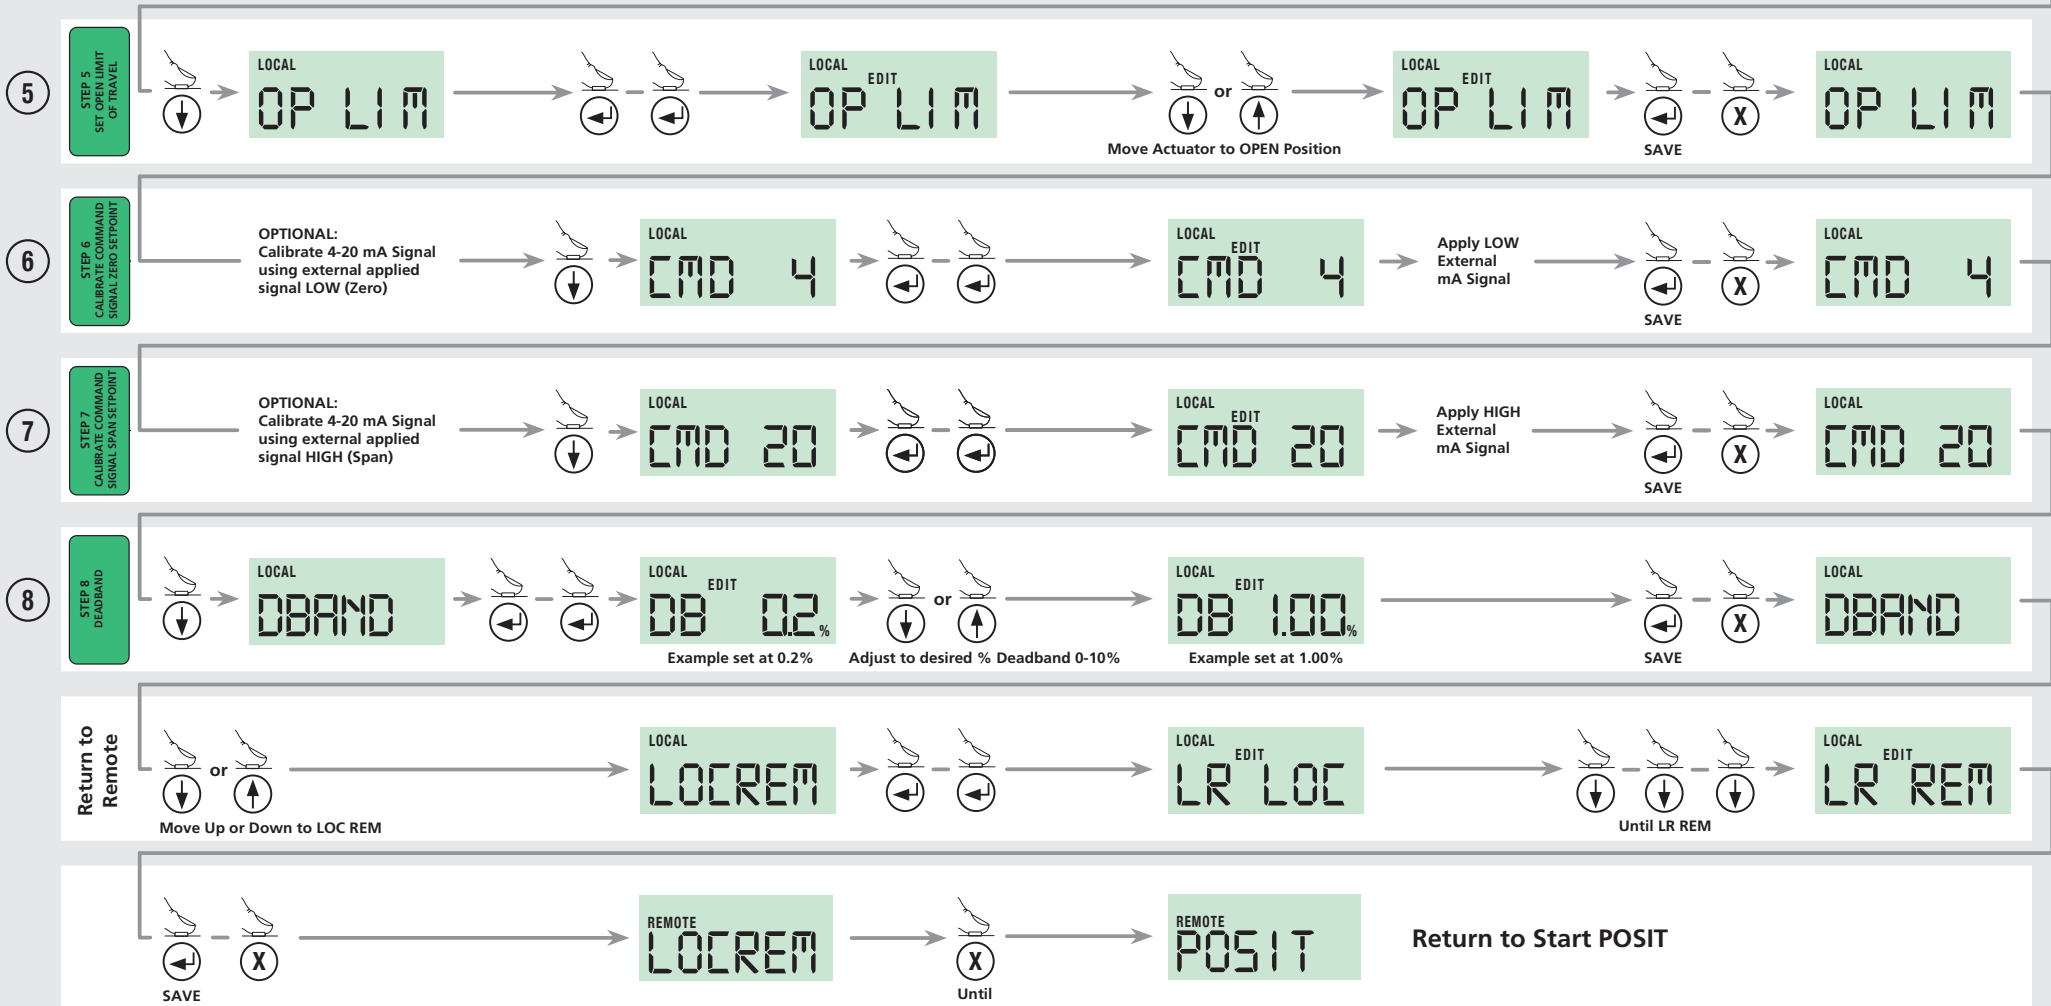

These instructions enable the actuator to be configured to suit the valve and must be carried out before electrical start up. For complete instructions see PUB094-009 CMA Installation Manual.

PUB094-007-00 Issue 09/18

rotork®

www.rotork.com

Rotork plc
Brassmill Lane, Bath, UK
tel +44 (0)1225 733200
fax +44 (0)1225 333467
email mail@rotork.com

USA
Rotork Controls
tel +1 (414) 461 9200
fax +1 (414) 461 1024
email info@rotork.com

A full listing of our worldwide sales and service network is available on our website.

As part of a process of on-going product development, Rotork reserves the right to amend and change specifications without prior notice. Published data may be subject to change. For the very latest version release, visit our website at www.rotork.com
The name Rotork is a registered trademark. Rotork recognises all registered trademarks. Published and produced in the UK by Rotork. POWTG0918